TBS388 instruction

Please read the instructions carefully before using, in order to correctly use.

After reading, please safekeeping.

Safety precautions

↑ WARNING

- Do not use the time switch in any equipment that supports human death or significant social problems and this switch is eslicitly not intended for such applications.
- If you want to use the time switch in equipment that could cause a financial loss
 if a fallure occurs(such as in heaters and refrigerators), select a model with
 excess capacity in terms of characteristics and performance, then also take
 safety measures such as providing suclicate circuits.

∴CAUTION

- Do not disassemble or modify the time switch. You may receive an electrical shock ,cause a fire or damage the switch.
- Please do not touch the termina, After the power is on.
 Otherwise there will be the danger of electric shock.
- If it is found that the terminal part of the rusting, please as soon as possible replacement of good or you may cause a fire by poor contact
- Dont use the time switch where it mighe be splashed by water or oil you
 mayreceive an electrical shock ,cause a fire,or damage the switch.

Protection cover plate Minute hand Battery cover

Names of each parts

Setting pin

Terminal cover

Dial

Current time

Minute dial


Manual switch

DIN rail fixture

Power supply terminals


Use matters needing attention

- Proofing time, please be sure to hand in the direction of the arrow. Mandatory rotates in the reverse direction or rotary dial will result in failure.
- In the purchase of the product, the built-in battery for its discharge and power decrease phenomenon. In full discharge of the case, even if the power on, clockwise will immediately stop. At this time, please connect power after its charging 2 to 3 minutes, then proofe the time

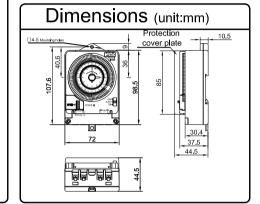

Setting the operating time

 Fold the setting pin inside(OFF)or outside(ON) at the desired time you want the action to occur.

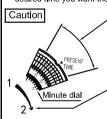


- OD not try to fold the four setting pins next to the current time display(*).you can not set these times. if you force it,you maby damage the switch.
- ② If the time you want is in this area, turn the minute in the direction shown by the arrow and then fold the setting pin.

-[Example]This occasion

- The setting like this at 10:00 In the morning [ON] at 10:30 in the morning [OFF]
- The setting like this 01:00 in the afternoon

 [ON] and 2:30 in the afternoon [OFF]

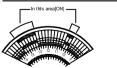

CAUTION

Please bring hope time set button successive defeat. Set the button down, be sure to hear" Khaki" the exact sound.

② Adjusting the current time

 Turn the minute dial the direction shown by the arrow to match the current time.



 Make sure to turn the minute knob only in the direction shown by the arow. Turning it backward forcibly may damage the switch
 Do not try to turn the dial palte itself.you

may cause a malfunction.

The dial shows the time using a 24 hour system.

When adjusting the current time be careful not confuse AM and PM.

Setting the manual switch

• Set the manual switch to the 「AUTO」 position.

[AUTO] : The output will be turned on and dff at

[ON]: The outputwill be on ,regardless of the settings(continuously ON).

「OFF」:The output will be off,regardless of the settings(continuously OF).

■You Can use a manual switch load operation test and please set to "ON" or "OFF" position



Please turn it to $\lceil \text{AUTO} \rfloor$ position affter you finished your testing

About life

Under normal circumstances, the everage life expectancy is shown as follows

Contact switch frequency 50,000times(impedance load:250VAC 15A)

Life time
 5years (temperature 25°C relative hunidity65%

Nickel-cadmium battery 3 years(temperature 25°C relative hunidity65%

AS long as there is one of the zhove mentioned reaches it slife, please change for a new product

When you belive that there is a failure

Phenomenon	Cause and countermesure	
Load do not action ad the detenimed time	The time switch for 24 hours perhaps you have fixed morning and afernoon please confirm thepresent moment of the time switch.	
	this is a mechanical time switch All of this kind of products have around ±3minutes error when action	
Clockwise unormal	When it happened power outage as esceed block out compensation time(300hours)clockwise will stop, and the now moment will be deviation.Please co llect it to present moment	
Clockwise step running and Electricity lights flashing	Indicated that the nickel-cadmium battery piease entrust it to agents or our compary	

Specification list				
Model		TBS388		
working voltage		220VAC 110VAC		
power frequency		50HZ/60HZ general		
Drive Modle		Quartz mtor type		
Blackout compensation		500h(operation temperrature20°C)		
Time precision		Poor reading ±30s(operation temperature 25℃)		
Action time precision		± 3 minutes(Not including InItlal time to adjust error)		
Cycle		24 hours		
Power consumption		110VAC1W 220VAC2W		
Output contacts		SPST()		
Contact capacity	Resistance load	20A		
	Incandescent lamp load	10A		
	Inductivloade (cosØ=0.7)	12A		
	Motor load (cosØ=0.7)	AC110.750W AC220V.1500W		
	Minimum setting unit	15 minutes		
Setting time	Minimum setting	15 minutes		
	NO.of on/off operation	96 operations/day		
Ambient operating temperature		-10°C to +50°C		
Ambient operating humidity		less than 85%		
Welght		180g		

Provide replacement parts (please change for ordering when it Lost or damaged)

Component name	Type	For test		
The protection cover plate	TB38801001			
DIN rail installation card buckle	TB38801002			
Nickel hydrogen battery	TB38801003	1. 2V 110mAh		

Aabout time switch action time precision

The action of time switch time precision is ±3 points. Not including the initial time of adjustment error. Temperature conditions for 25 °C situation. Not affected by power frequency variation.